

Operating instructions for HTS7 Remote Control Handset



Press(stop button)for 10 seconds before use, and then"lift normally".

Key mark:

1. Up key Δ , directly press and holdΔ to control the push rod to rise.
2. Stop key □,press and hold it directly to control the push rod to stop.
3. Down key ▽ , press and hold it directly to control the push rod to retract.

Stroke reset:

1.In case that the push rod does not work or is garbled when it is in the alarm state or after runing to the lowest position,

Press the 'stop' button for 10 seconds, release the button after returning, and the push rod starts to retract to the end.

And rebound to a certain height, then the lowest height is displayed after reset.

2.Press and hold the 'stop' button for 10 seconds to reset(return to factory settings).

Wireless handle code operation:

After the power supply is plugged into the 220V power supply, press the up key Δ and listen to the buzzer of the controller

Then press Stop key □ and listen to the buzzer of the controller.

Then press Down key ▽ and listen to the buzzer of the controller

Complete code alignment, can be used directly.

Example:

HTA28 Linear actuators with HTT2W DC synchronous controller.

